



NEWSLETTER


APRIL 23RD 2018

SOFTWARE VERSION 2.6 - NEW RELEASE

With the release of Software Version 2.6, the Zipwake Series S significantly expands its capabilities by introducing the support for integrating Zipwake with external devices via NMEA 2000 networks. The integration includes both external monitoring as well as support for control of the Zipwake system from external devices. The usual additional enhancements in the pursuit of perfection are also included.

SYSTEM INTEGRATION

When connected to an NMEA 2000 network, the Zipwake Series S will with the release of Software Version 2.6, transmit standardized information to allow monitoring in NMEA2000 compliant multi-function displays. This includes monitoring of interceptor positions, attitude angles, rate of turn, speed and course over ground. In addition, extended proprietary system communications with external devices are supported, which enables developers to implement a Zipwake application in their devices and externally control e.g. AUTO mode selection and pitch offset request.

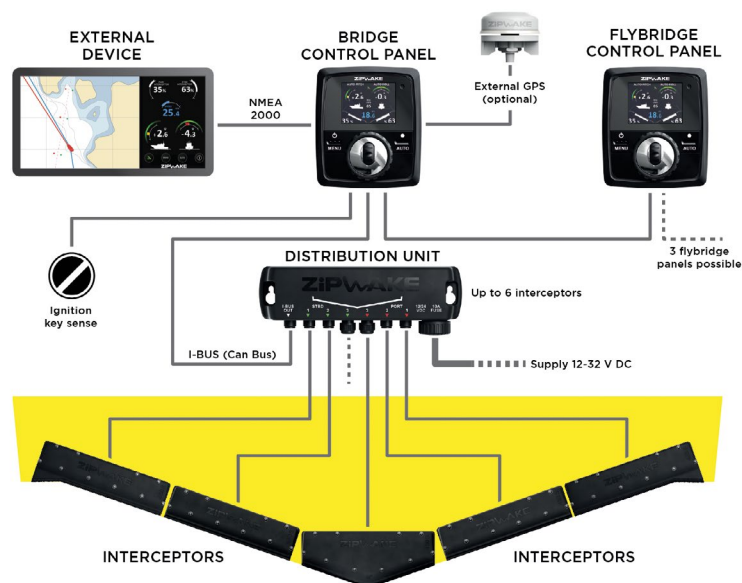


Follow us



AUTO ROLL SPEED RANGE

Version 2.6 introduce the possibility to automatically inactivate AUTO Roll when exceeding an upper speed limit, which can be desired in some high-speed applications. The default Upper Limit is determined by the system based on boat data, but can also be adjusted by the operator. In conjunction with the introduction of the 'Upper Limit' of active AUTO Roll, the previous 'AUTO Roll threshold' changes name to 'Lower Limit' at which AUTO Roll is active. More details about the AUTO Roll speed range can be found in the Operator's Manual.

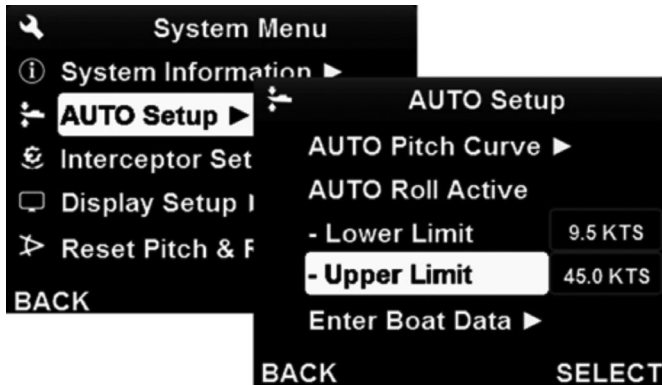

AUTO-CLEANING

It has been reported that the Auto-cleaning procedure sometimes is not executed as it should. Therefore the criteria to initiate Auto-cleaning are modified and less restrictive in the new software version. Read more in operator's manual (Rev. R4A).

SYSTEM UPGRADE

Download the software upgrade file from www.zipwake.com and copy it to the root of a high quality USB memory stick. Then refer to the Operator's Manual Section 17 and follow the remaining steps.



INSTALLATION GUIDE & OPERATOR'S MANUAL - NEW RELEASES

New releases of the Operator's Manual (Rev. R4A) and Installation Guide (Rev. R1F) have been published on the website (initially English versions), introducing information and instructions associated with the system integration and the new chine and intermediate interceptors.